



PROGRAMMABLE THERMOSTAT

CH180

HOW TO IDENTIFY THE CORRECT INSTRUCTION MANUAL

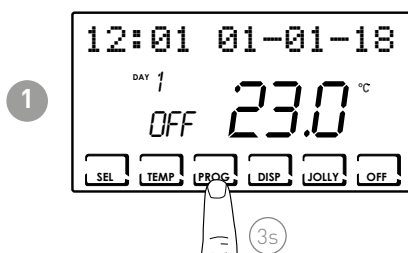


To identify the correct instruction manual for your product, follow the procedure to enter the advanced program:

Step 1: Press and hold for 3 sec. the PROG button 

Step 2: Scroll the menu with the arrows ◀ or ▶ and check the device version:

CH180 Vxx refer to the manual Code 5679798B
CH180B/B2 Vxx refer to the manual Code 5680040

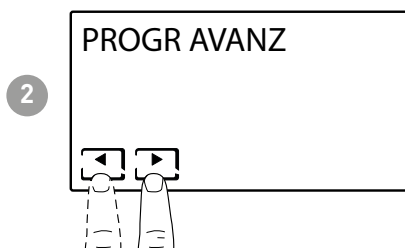


Download the instructions from our website www.fantiniCosmi.it



Manual Code 5679798B



Manual Code 5680040

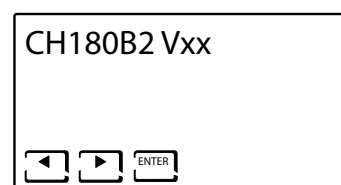

Manual Code 5680040